

# evolution quick-fix curved

# user instructions



Offer up each magbar to the popup frame node and the magbar will snap magnetically into place

A typical 3 x 3 kit includes : quick-fix popup frame, 18 quick-fix magbars, 3 front hangers and kickers and two 'D' end hangers  
(Note : Elipse transit case is not included)




Take the inner nodes of the popup and with a throw action open out the frame



Magbars should run vertically (4 lines across the front of the frame and 2 lines on each side at the rear )



Lock the popup frame locking arms into position

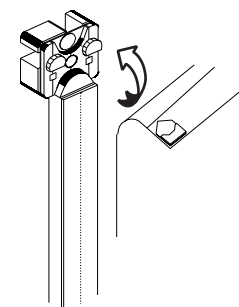

Finally unroll each panel and locate the plastic hanger hook onto each frame stud  
Line up the panel edge with the centre of the magbar

## Technical Specification (3 x 3 curved)

- Assembled size : 2235mm (H) x 2540mm (W) x 685mm (D)
- Unit weight inc transit case : 18kg approx
- Single magbar weight : 0.2kg approx
- Single 3 x 3 popup frame weight : 4.5kg approx
- Elipse transit case weight : 9kg approx



Completed System

To unassemble the system reverse the instructions remembering to :

Remove each panel from the bottom edge and roll with the mag tape on the inner edge

**Important note :**  
**Remove all magbars and unfasten locking arms before collapsing the popup frame**